

Pack-Master Waste Compactors

Operating Tips

Manual Pack-Master Model 1258

To begin compacting:

- Swing the lower lever to the 'DOWN' position first and then, swing the upper lever to the 'DOWN' position.

After compacting, and to reverse direction:

- While applying downward pressure on jack handle, swing upper lever to 'UP' position first, then the lower lever. This removes pressure on the pin and will extend the life of the jacking pins.

Maintenance:

- Lubricate the jack bar and jack pins with white lithium grease once a month. This will extend jack and pin life.
- If jack pins do not engage bar when operating or pin handles sag excessively, pins maybe worn and need to be replaced.

! CAUTION !

- ✓ *Keep hands away from barrel edge and compactor plate when operating*
- ✓ *Never compact combustible materials or any glass items*
- ✓ *Never add a 'cheater bar', or extension to increase the leverage on the jack handle*
- ✓ *Always hold on to jack handle when operating unit*
- ✓ *Releasing the jack handle when compacting and lower jack pin has not 'snapped' into place, will allow the jack handle to spring upwards*

Pack-Master Air Models 1259 & 1453

Connect to dry air source with 80-PSI to 150-PSI. If air lines have excessive moisture, install a water trap or Filter/lubricator in air line. A lubricator will extend air cylinder life.

Operation:

- Simply lift control arm and operate joystick for compaction or retracting.
- If control arm is dropped, motion will stop and ram plate will begin to creep upwards.
- For safety, the ram plate will not maintain the compacted position when joystick or control arm are released.

Maintenance:

- Periodically lubricate pivot points on control arm with light machine oil.
- Drain and add lubricant to Filter/lubricator if installed.
- Periodically wipe off cylinder rod with clean rod when extended.
- If unit loses compacting force, or if plate will not stay up after retracting, cylinder seals may be leaking or valve control may be dirty or need replacing.

! CAUTION !

- ✓ *Keep hands away from barrel edge and compactor plate when operating*
- ✓ *Never compact combustible materials or any glass items*
- ✓ *Do not exceed 250-PSI inlet pressure to air cylinder*