

# PACKMASTER

## Assembly Instructions Model # 10001258

**NOTE:** All parts that are to be mounted on the left side of the base plate are stamped with the letter “L”.

1. Mount left (1) and right (2) uprights to base plate (3) using 4, 1/2” x 1-1/2” long bolts, 8 flat washers and 4 Nylock nuts. **NOTE:** Do not tighten bolts all the way, so the jack assembly can be installed.
2. Place control levers (8) in the “UP” position and remove Face Plate from Jack assembly.
3. Insert tongue of ram (12) into left (uncapped) upright **with Ram Bracket on UNDERNEATH side of uprights.** (See Assembly Instruction Detail) and assemble with 2, 1/2” x 4 - 1/2” long bolts, 4 flat washers and 2 Nylock nuts.
4. Align uprights and ram assembly and tighten all bolts. Mount Face Plate back onto Jack Assembly.
5. Mount circular ram plate (7) to ram (5) using cotter pin supplied.

### OPERATION OF PACKMASTER

1. To operate the PackMaster, swing the lower lever to the "DOWN" position first and then, swing the upper lever to the "DOWN" position. With both control levers in the “down” position, begin pumping the Jack handle up and down.

**CAUTION:** Always hold onto the jack handle while compacting. Jack handle may "SPRING" up when under load and levers have not snapped all the way in.

2. To retract the compactor plate, while applying downward pressure on jack handle, swing upper lever to "UP" position first, then the lower lever. This removes pressure on the pin and will extend the life of the jacking pins.

### **CAUTION:**

**Do not extend or modify the handle in any way.**

**Do not permanently bolt the PackMaster to the floor.**  
**Damage and breakage of ram assembly and personal injury may occur.**

### **CAUTION:**

**Unit is not designed for crushing of glass containers or items that may shatter or contain volatile vapors.**

### MAINTENANCE:

1. Jack Bar, Jack Pins and Jack Pivot Points must be periodically lubricated with white lithium grease for proper operation and warranty compliance. Lubricate weekly if used daily. Lubricate monthly for lighter use.



Fig. 1

# Pack-Master Assembly Detail

Figure 2  
View from  
rear of unit


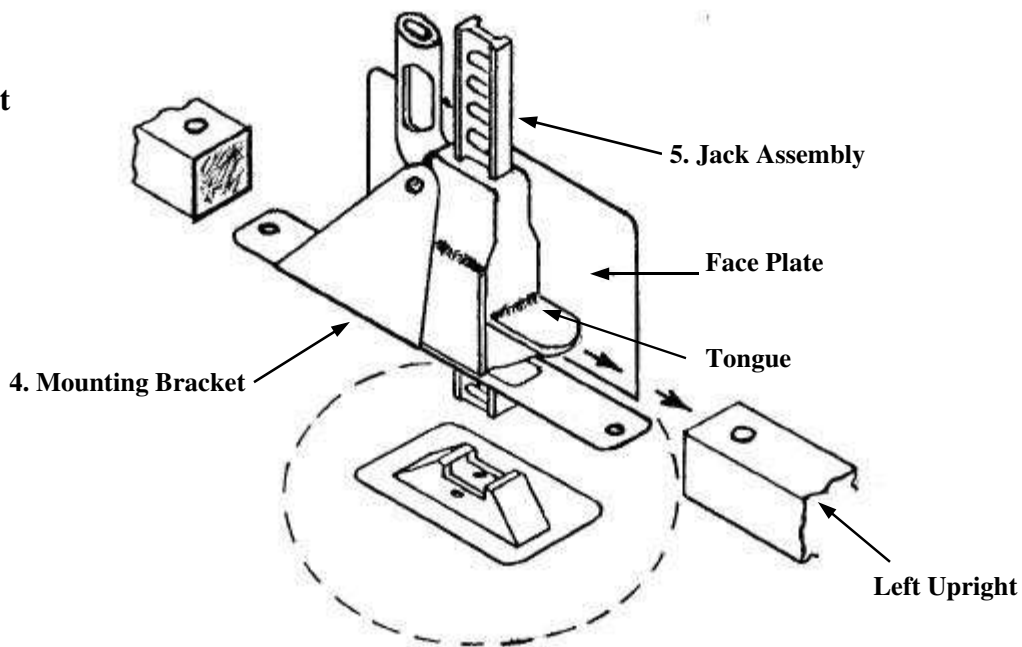


Figure 3  
View from  
rear of unit

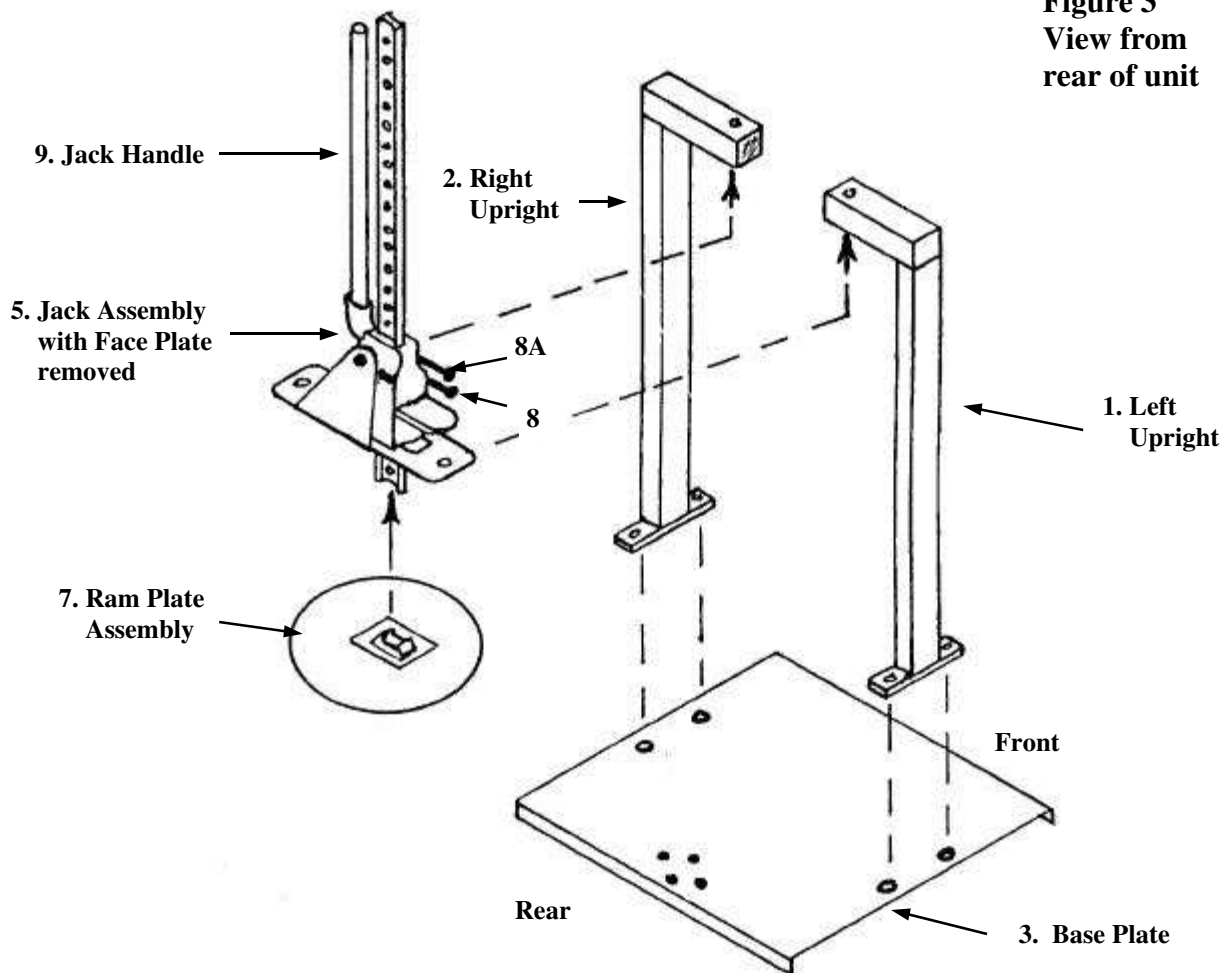


## Replacement Parts List PackMaster 10001258

<b>Item</b>	<b>Description</b>	<b>Part Number</b>
1	Left Upright	10001425
2	Right Upright	10001426
3	Base Plate	10001289
4	Mounting Bracket	10001427
5	Jack Assembly	10001458
6	Face Plate	N/A
7	Ram Plate Assembly (20" Dia.) (17" Dia)	10001428 10001288
8	4" Jack Pin w/lever (Lower) 3" Jack Pin w/lever (Upper)	10001568 10001567
9	Jack Handle	N/A
10	Spring, Bottom Pin	10001305
11	Spring, Top Pin	10001306
12	Jack Tongue	N/A

### CAUTION EXTREMELY DANGEROUS


**Do not extend or modify the handle in any way. Do not permanently bolt PackMaster to floor. Damage and breakage of ram assembly and personal injury may occur.**

# - Important - Assembly Instruction Details

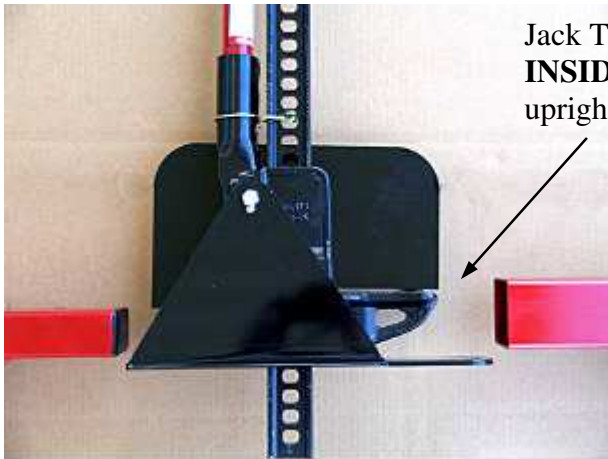

Jack Tongue is inserted  
**INSIDE** opening in left  
upright

View from  
back of jack  
assembly

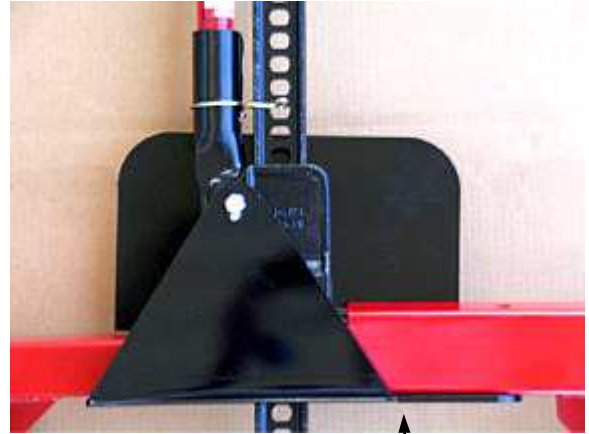

Ram bracket must  
be mounted on  
bottom of uprights



Front view showing components in  
correct position for final assembly

**OPERATION NOTE:** To move “Up” and “Down” levers to  
“Up” position after compacting, place down pressure on jack handle  
while moving levers to the “Up” position.

**Newstripe, Inc.**

1700 Jasper St, #F

Aurora , Co 80011

303-364-7786

Fax 303-364-7796

## **THE NEWSTRIPE WARRANTY**

Newstripe, Inc., warrants to the original purchase, for 18 (eighteen) months after date of purchase, that the equipment hereby sold shall be free from defects in materials and workmanship. This warranty does not extend to any damage or malfunction resulting from misuse, neglect, accident or improper operation.

Damage incurred in shipment from Newstripe, Inc. to the customer is the total responsibility of the carrier. Customer must note damages on the Bill of Lading of Trucking Company or Railroad; and Newstripe, Inc. will furnish to you the cost or parts and labor. You can then bill the common carrier for the damages by placing his signature on the documents.

The Newstripe, Inc. obligation under this warranty and any implied warranties is limited to replacement or repair of defective parts of its manufacturer without charge for 18 (eighteen) months from date of purchase. For service under this warranty, buyer shall ship the defective part, parts of equipment, transportation prepaid, to Newstripe, Inc. together with a written description of any claimed defect and proof of purchase date of the materials being returned.

The gasoline engine and compressors are furnished with their respective manufacturer's warranties only. Such components are not covered by any warranty of Newstripe, Inc.

The responsibilities described above are the only responsibilities of Newstripe, Inc. under this written warranty or any implied warranty and may be exercised only within 18 (eighteen) months from the date of purchase. In no event shall Newstripe, Inc. be liable for incidental or consequential damages and no person had any authority to bind it to any representation or warranty, not be responsible for work done, materials furnished or repairs made by others without its specific written authorization.

**THIS WARRANTY SHALL BE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTIES OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND THERE IS NO OTHER REPRESENTATION OR WARRANTY OF ANY KIND WITH RESPECT TO THE GOODS SOLD HEREBY EXCEPT AS SET FORTH HEREIN. IT IS EXPRESSLY AGREED THAT THIS WARRANTY SHALL BE LIMITED TO THE ADJUSTMENT, REPAIR OR REPLACEMENT OF PARTS AND THE LABOR AND SERVICES REQUIRED THEREBY. IN NO EVENT, INCLUDING ANY CLAIM FOR NEGLIGENCE, SHALL NEWSTRIPE, INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**